



Battery Replacement Instruction for Warn Wireless Controller


1. Use Phillips screwdriver to remove the screws.

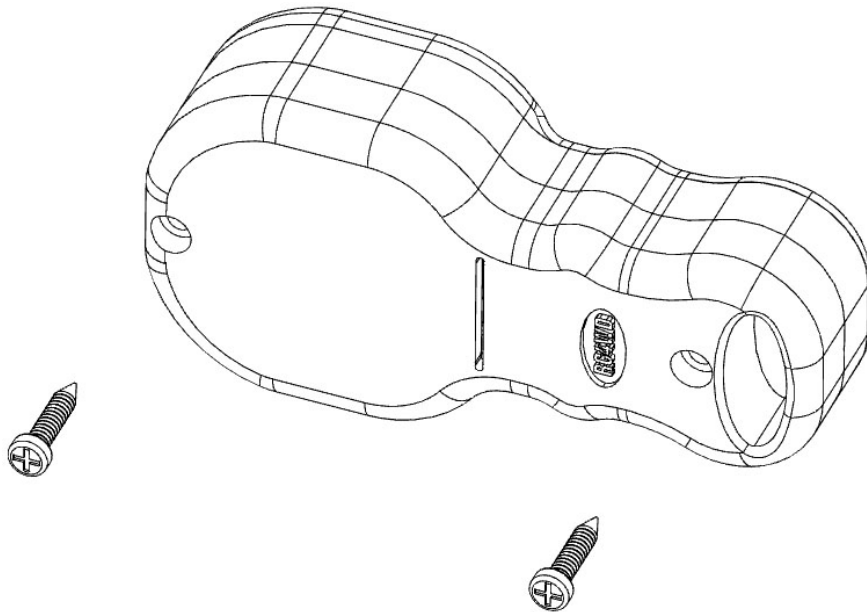


2. Remove the case back.

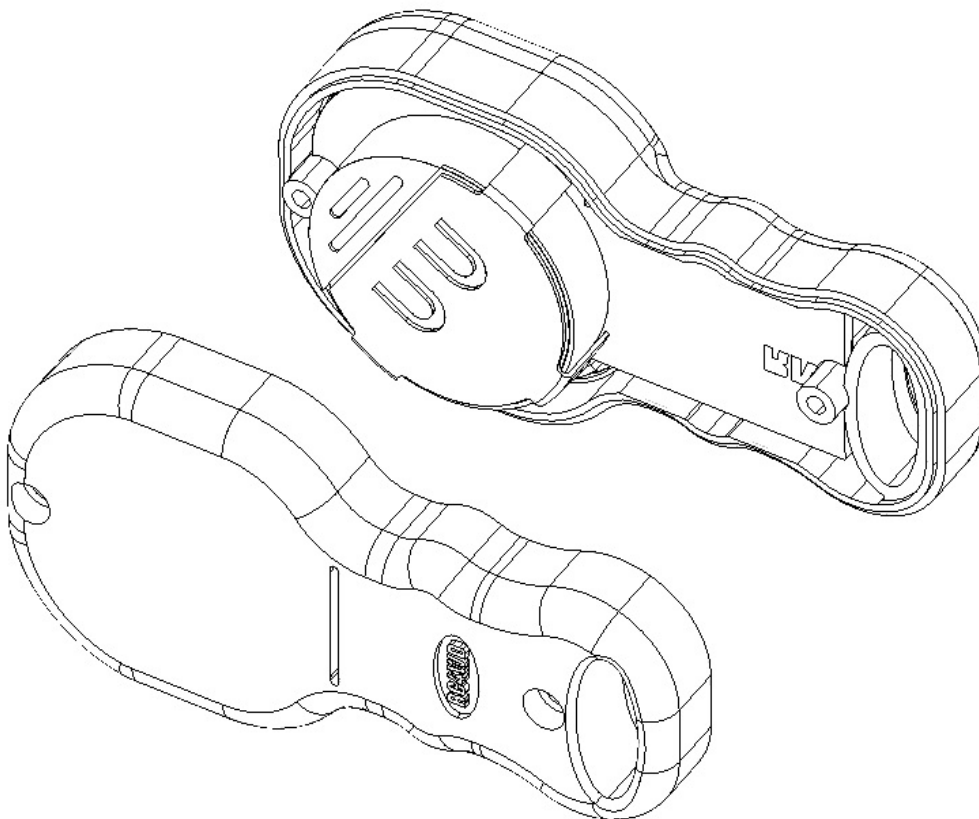


3. Wiggle the circuit board back and forth making sure to keep it flat/horizontal with the case front. This process is very important to raise the electronic board just enough to remove the battery. You do not need to fully remove the circuit board.

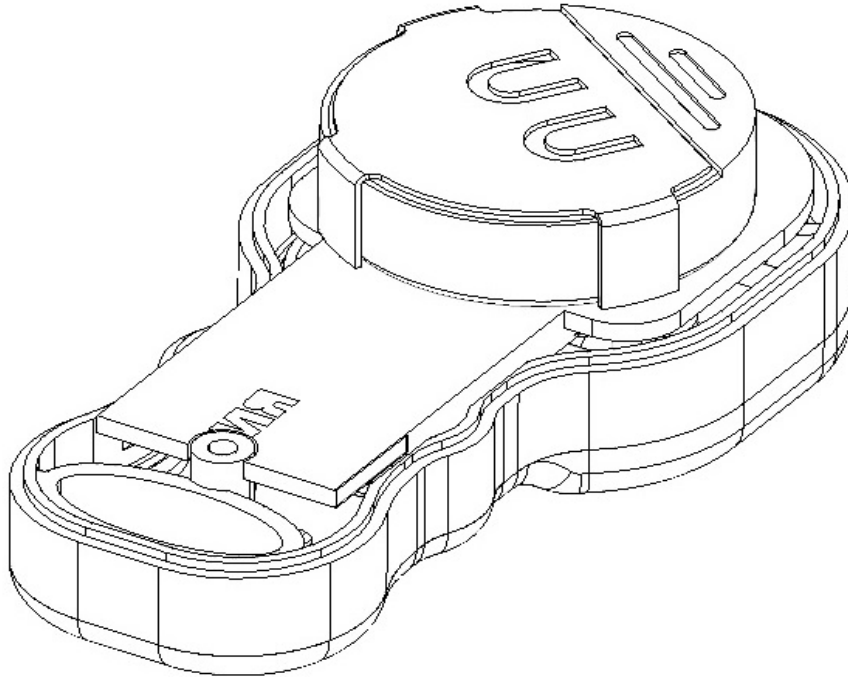


4. Use some small force to remove the battery box.

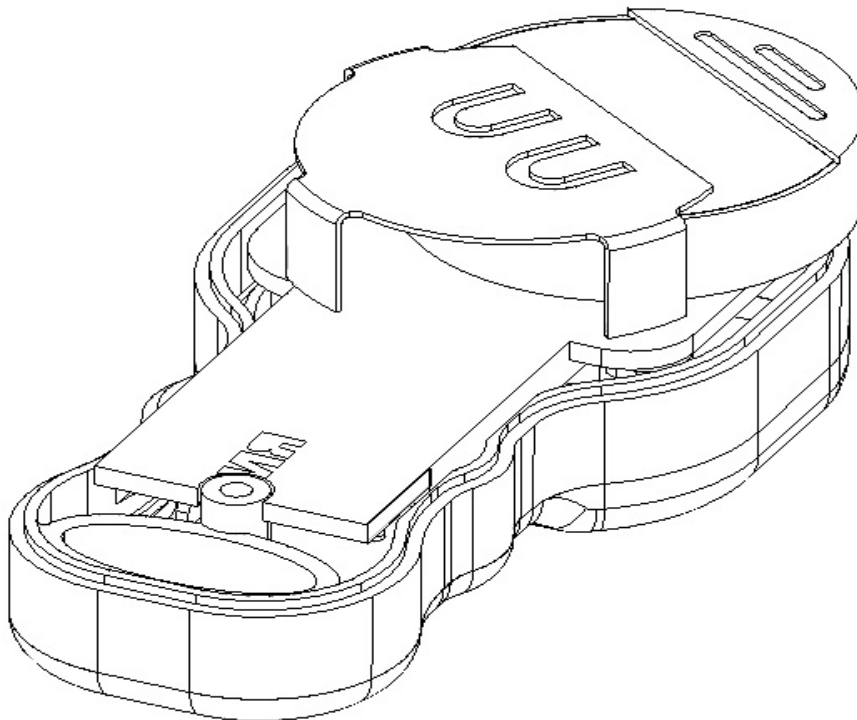


5. First pull out the battery, then instead of new batteries.

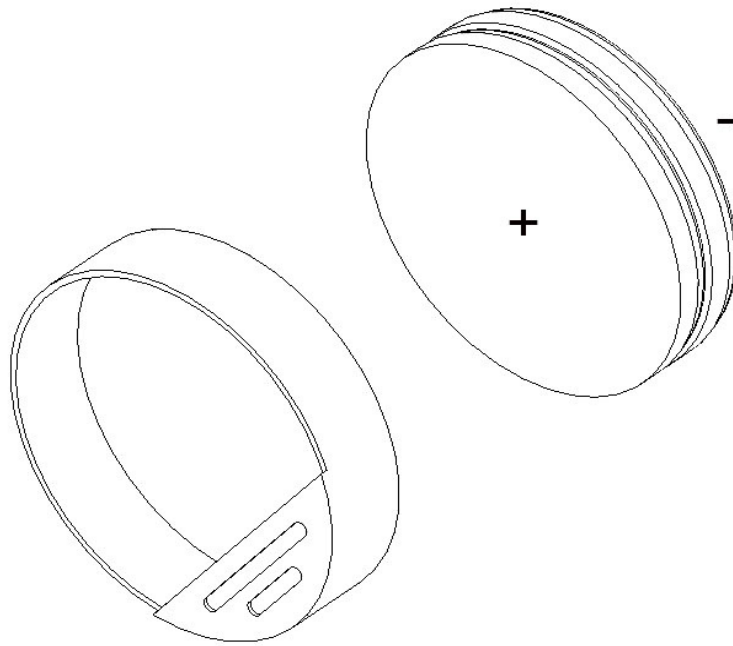


6. When installing the new batteries, make sure they are in the proper configuration. Positive facing up, and negative facing down.

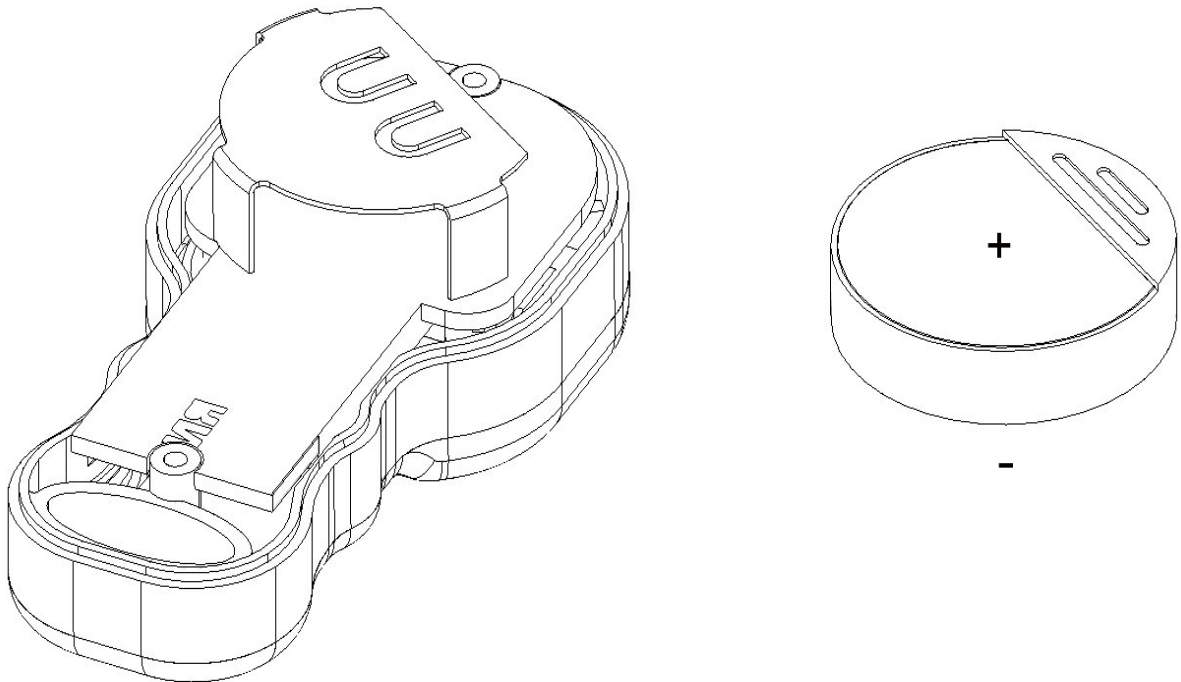

7. Install the new batteries. Push the batteries into the circuit board (make sure not to use too much force)

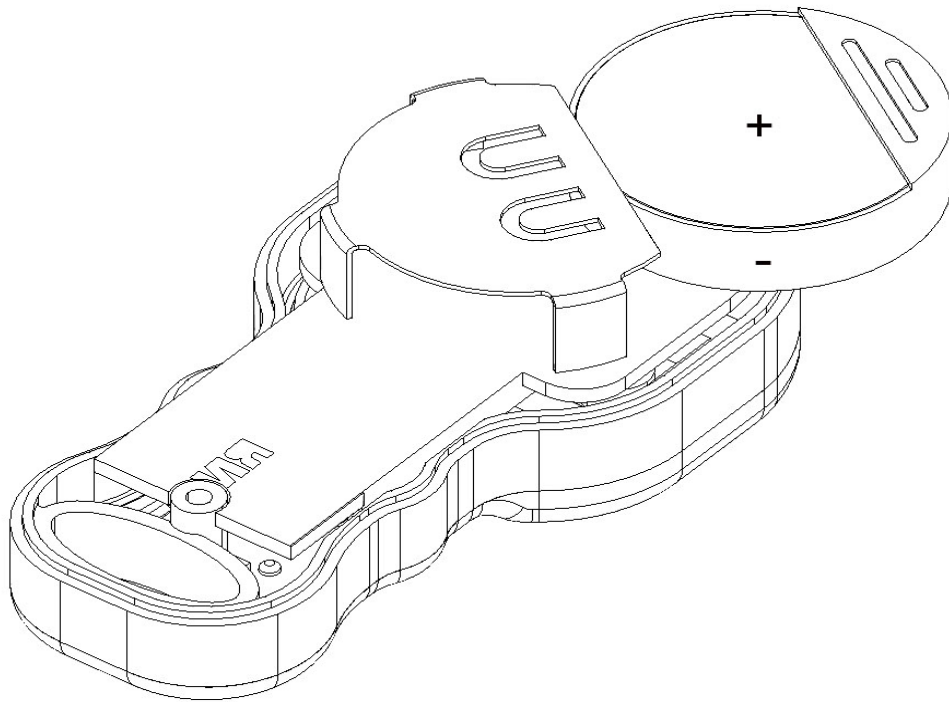

Note: The positive needs to be facing up, and the negative side facing down on both batteries.

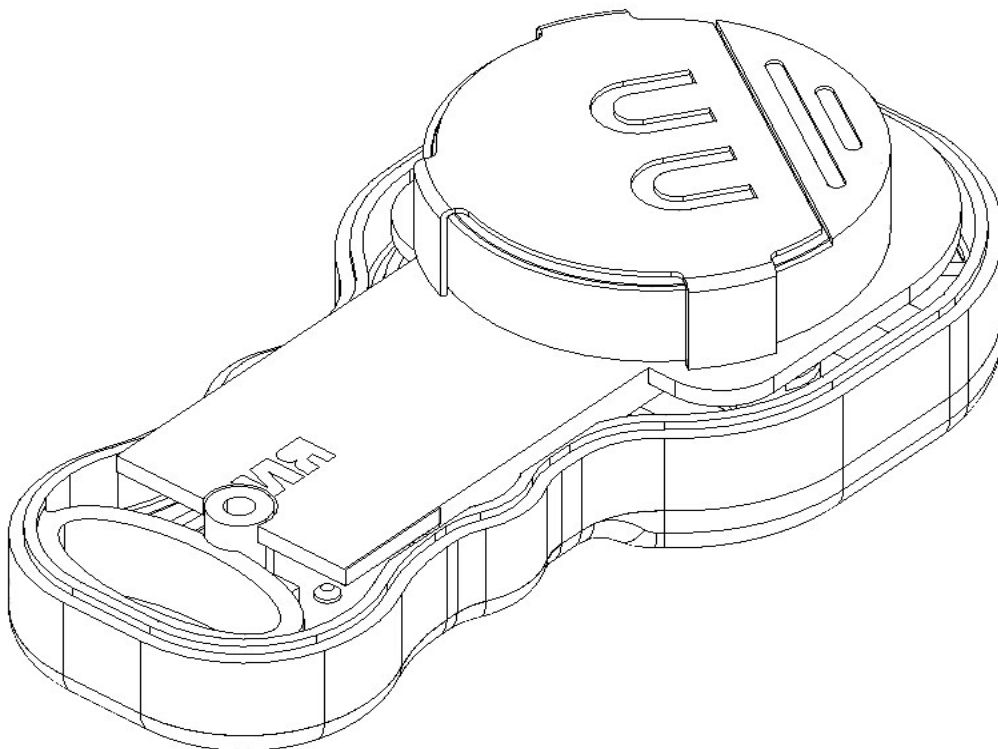

8. Reinstall the rear case and install the two screws with the Phillips screw driver.

