


RC4WD

1/14 Scale DXR2 Hydraulic Earth Dozer

—The below steps need to be done before ready to run



4. Place battery

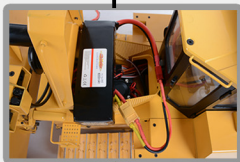

3. Connect battery



2. Open lid



1. Prepare battery



Pour hydraulic oil



Reset button



Install battery