



LightForce 1/10 140 Lance Light Instruction


Step 1. Install your 3mm LED.

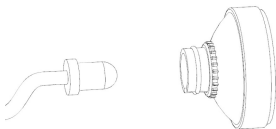

Step 2. Install the rear cover plate.

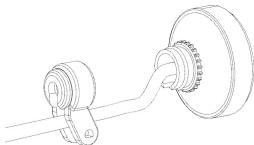


Step 3. Install the lower base mount.

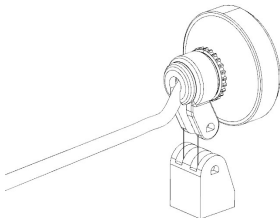


LightForce 1/10 140 Lance Light Instruction

Step 4. Use the supplied keyway to secure the two parts. (Be careful. It is okay to use pliers to help on this, but you will want to use non marking pliers)

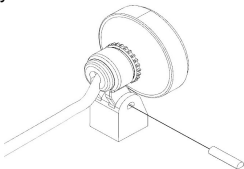

Step 5. Install Front Light lens cover (you may want to use a small bit of non-whitening CA glue on this to prevent loosing the lens cover)

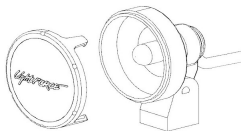

Step 6. Install to supplied lightbar or on your project using the supplied M2 X 6MM SHCS. (If using on a special project, make sure the screw length is acceptable. If not it can cause damage to the light pod)

