



LightForce 1/10 240 XGT Light Instruction


Step1. Install your 3mm LED

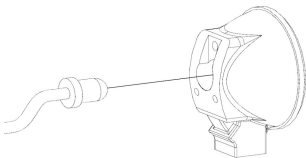

Step 2. Install the rear cover plate.

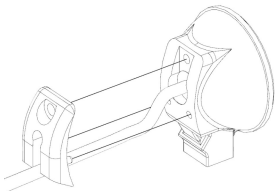


Step3. Install the supplied M1.6x 4mm SHCS and tighten. (Do not overtighten)

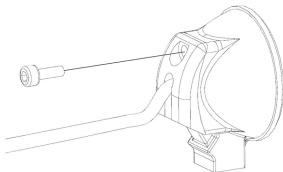

LightForce 1/10 240 XGT Light Instruction

Step4. Install Front Light lens cover (you may want to use a small bit of non-whitening CA glue on this to prevent loosing the lens cover)

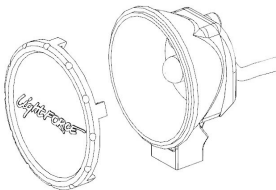

Step5. Install to supplied light bar or on your project using the supplied M2 X 6MM SHCS. (If using on a special project, make sure the screw length is acceptable. If not it can cause damage to the light pod)

